


# User Manual



## GLASS GENIE

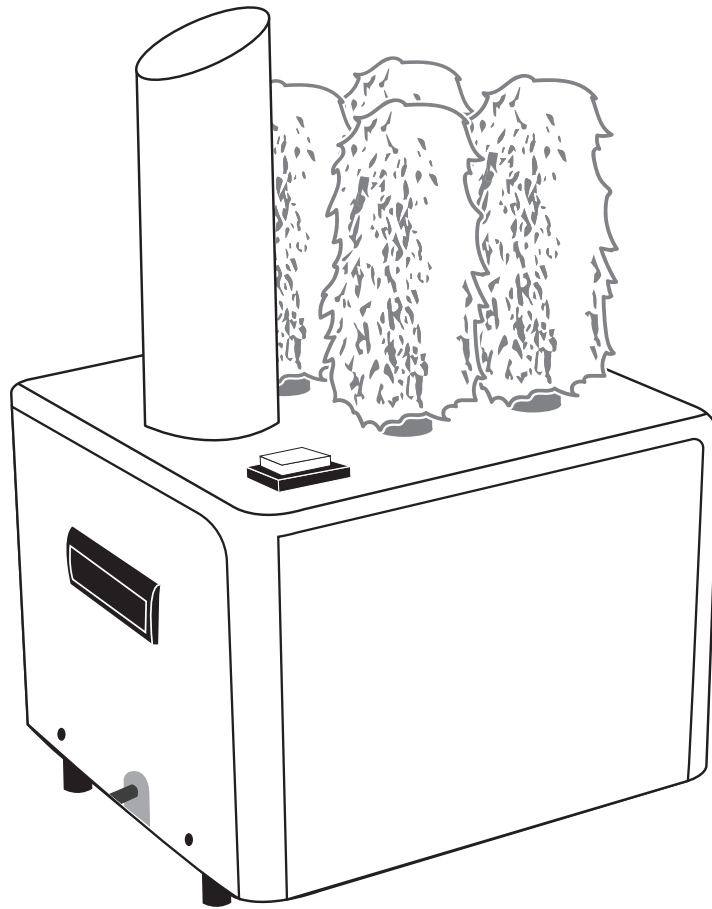

### Electric Glass Polisher



**Models:** 274GP1250

11/2018

***Please read and keep these instructions. Indoor use only.***

## Specifications



**Voltage:** 120V AC 50/60Hz 1350W 12.5 Amps

**Capacity:** Up to 330 glasses per hour

**Dimensions:** 32.5 x 30 x 50cm 12.8 x 11.8 x 19.7in

**Weight:** 15.5 Kgs / 34 lbs

**Air Flow:** 164 CFM

**Hot Air Temperature:** 55-60°C / 130-140°F

## Important Safety Information

**CAUTION: THESE MARKS ARE USED AS A REFERENCE THROUGHOUT THIS MANUAL.**



### **LIGHTNING FLASH IN TRIANGLE**

This is used to alert the user of the presence of dangerous voltage that may create a risk of electric shock. Do not open cover.



### **EXCLAMATION POINT IN TRIANGLE**

This is used to alert the user to:

- “CAUTION”: regarding important information regarding the care and use of this equipment.
- “WARNING”: regarding possibility of personal injury.

## Important Safeguards

### PLEASE READ THESE FIRST!

Follow these basic safety precautions when using this electrical appliance to reduce the risk of fire, electric shock, and/or personal injury.



**WARNING:**

Plug unit only into a GROUNDED outlet that matches the voltage/cycle as listed on the motor. Outlet must be equipped with a UL/CSA approved ground fault circuit interrupter (G.F.C.I.).



**WARNING:**

Keep electrical cord clear of brushes and water.



**WARNING:**

DO NOT use machine if the power cord is cracked or damaged.



**WARNING:**

Disconnect from the power source before servicing.



**WARNING:**

Disconnect from the power source before servicing.



**WARNING:**

Ensure brushes are securely in place before turning machine on.



**WARNING:**

Do not touch the rotating brushes with hands.



**WARNING:**

Do not insert objects other than glass in between the rotating brushes.



**WARNING:**

Do not operate the machine without the brushes and air blower in place.



**WARNING:**

Do not place any objects into the glass polisher's ventilation openings.



**WARNING:**

Loose clothing, long hair and jewelry can be caught in moving parts, posing an entrapment hazard.



**CAUTION:**

Use machine only for the purpose it was intended.




**CAUTION:**

Use only genuine replacement parts.

## Assembly Instructions

1. Attach air blower onto the base with screw provided.
2. Insert short brush onto center post of the base.
3. Insert remaining brushes onto outer posts.

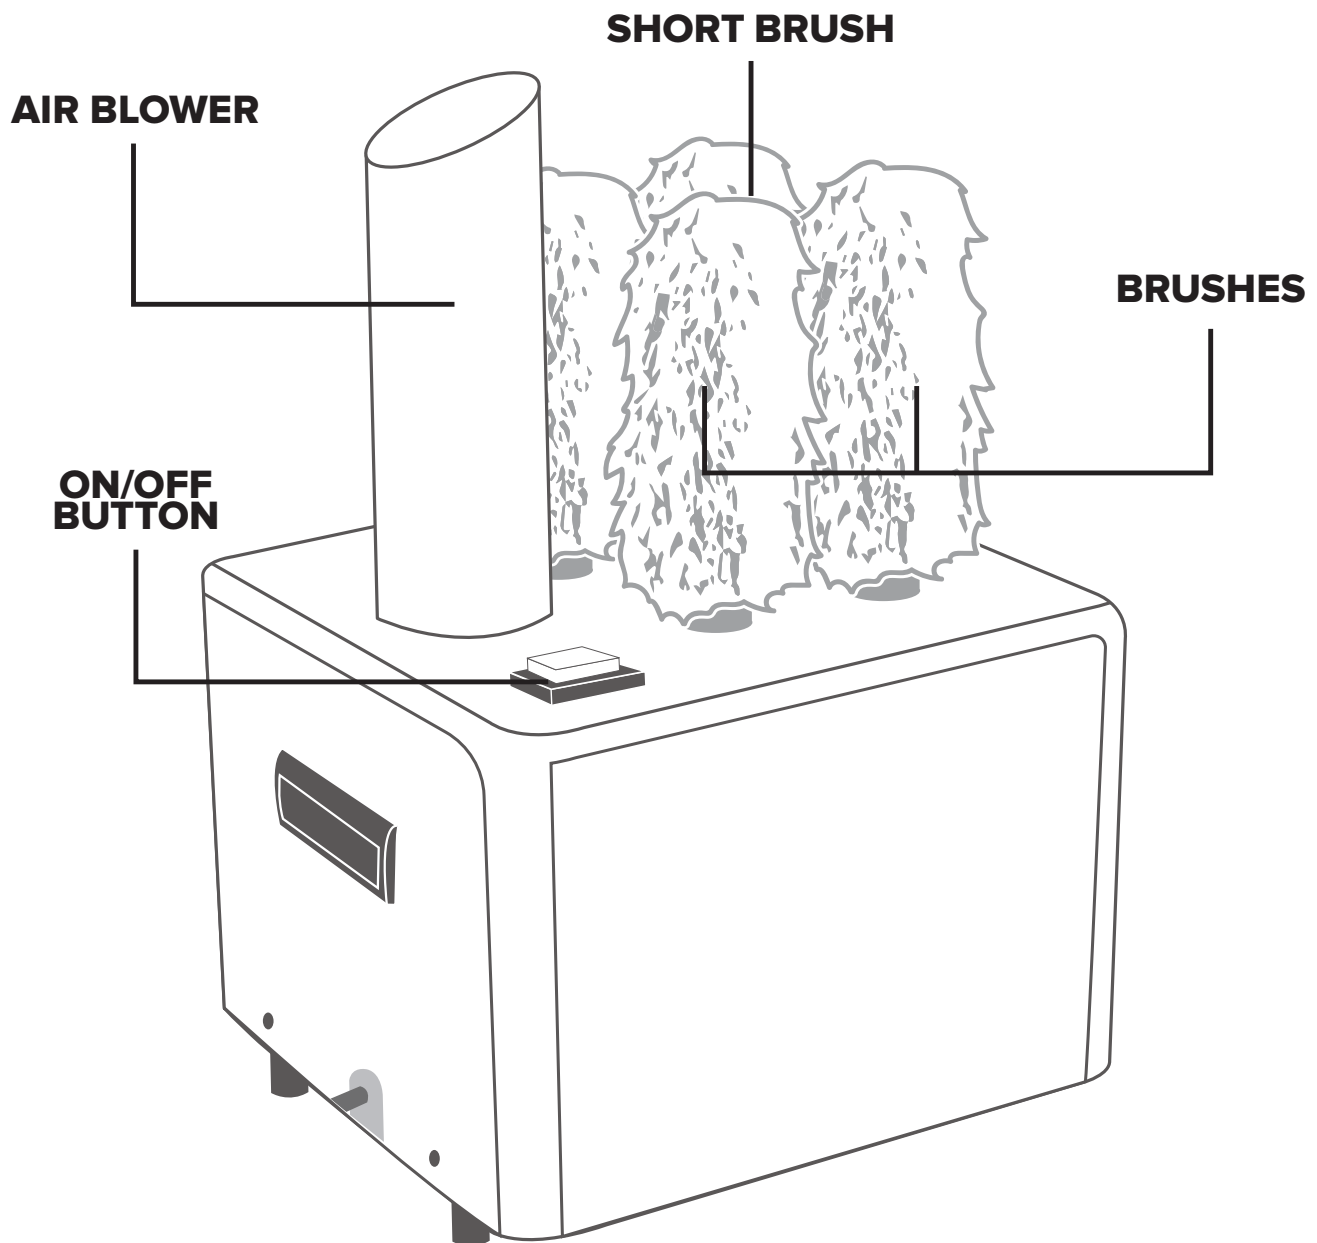

## Operating Instructions

**NOTE: GLASSES MUST BE WASHED, RINSED, AND STILL DAMP WHEN INSERTED INTO THE GLASS POLISHER TO GET THE BEST RESULTS. DRY GLASSES ARE DIFFICULT TO POLISH.**

1. Plug power cord into grounded outlet.
2. Press ON/OFF button to turn glass polisher ON.
3. Grasp glass at the base and insert onto center brush, holding glass base stationary or with slight up and down movement while center brush dries and polishes the inside of the glass and four outer brushes dry and polish the outside of the glass.
4. Remove glass from glass polisher.
5. Press ON/OFF button to turn glass polisher OFF when not in use.

## Care and Maintenance

### CLEANING THE POLISHER EXTERIOR

1. Ensure glass polisher is OFF and unplug power cord from the outlet.
2. Clean external surface of glass polisher daily using a dampened sponge. Do not immerse glass washer in water or spray with water.
3. Dry the surface with a soft cloth.

### CLEANING THE BRUSHES

1. Ensure glass polisher is OFF and unplug power cord from the outlet.
2. Remove brushes by rotating each brush counter clockwise and pulling upward.
3. Wash brushes with mild laundry detergent and rinse well.
4. Use hands to squeeze as much water out of brushes as possible.
5. Insert short brush onto center post of the base.
6. Insert remaining brushes onto outer posts.
7. Plug power cord into a grounded outlet.
8. Press ON/OFF button to turn glass polisher ON. The air blower will dry the brushes in a few minutes.
9. Press ON/OFF button to turn glass polisher OFF when finished or not in use.

### REPLACING THE BRUSHES

1. Ensure glass polisher is OFF and unplug power cord from the outlet.
2. Remove brushes by rotating each brush counter clockwise and it pulling upward.
3. Insert short brush onto center post of the base.
4. Insert remaining brushes onto outer posts.

## Limited Replacement Warranty

This warranty exclusively covers the Glass Genie unit and does not cover any brushes that may come with the unit. The warranty runs for one year from the time of purchase and is for the benefit of the original purchaser only. All other warranties, expressed or implied, statutory or otherwise, including without limitation any implied warranty of merchantability or fitness for purposes are excluded. The Seller shall in no event be liable for direct, indirect or consequential damages in connection with Noble Products commercial products.

This warranty is not effective if damage occurs because of accident, carelessness, improper installation, lack of proper set-up, lack of supervision when required, or if the equipment is installed or operated in any manner contrary to the installation and operating instructions. Work performed by unauthorized personnel or unauthorized service agencies voids this warranty.

This warranty does not apply to, and Noble Products is not responsible for, any warranty claims made on products sold or used outside of the United States. This equipment is intended for commercial use only. Warranty is void if equipment is installed in anything other than commercial applications.